



目录

电性参数

典型特性曲线

可靠性实验



外形尺寸

包装

焊接指南

使用注意事项

分档

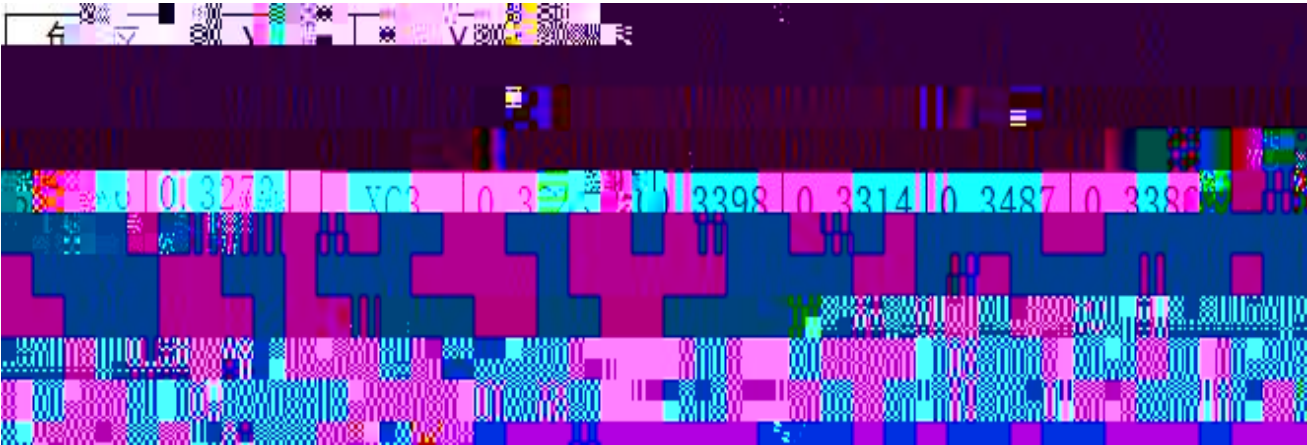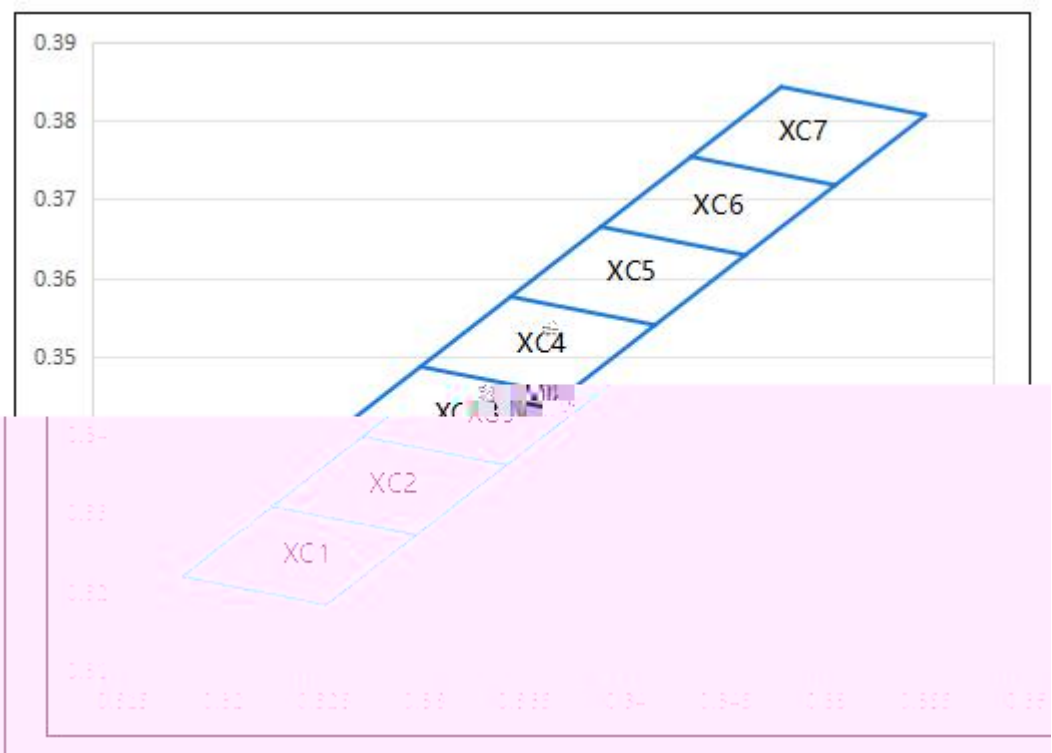

XY ±0.01 XY coordinate error ± 0.01













焊接指导（2）

Guideline for Soldering (2)

清洗:

30

30

3

50

LED

300W

LED

LED

It is recommended that alcohol be used as a solvent for cleaning after soldering. Cleaning is to go under 30 for 3 minutes or 50 for 30 seconds. When using other solvents, it should be]




使用注意事项（2）

Precautions (2)



LED

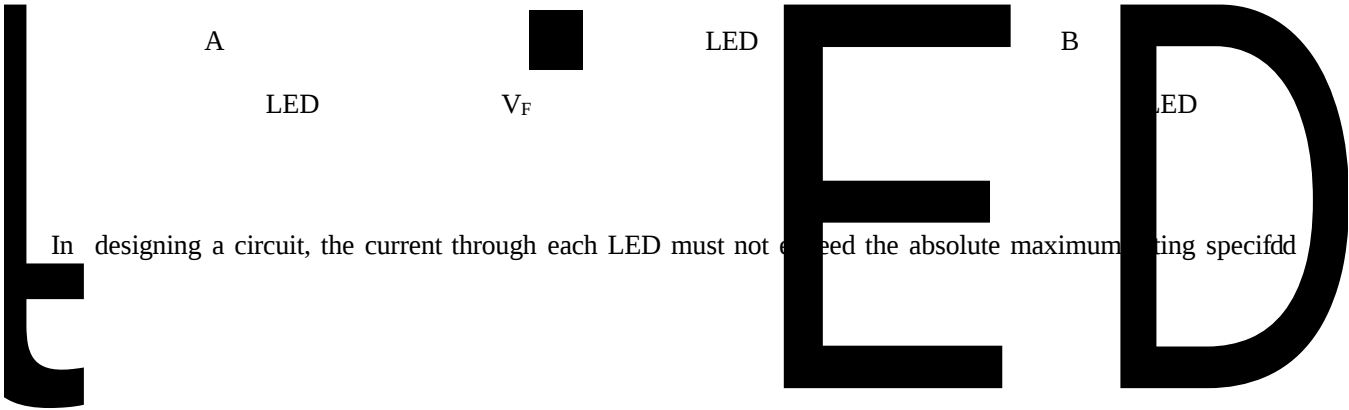

Precautions (3)

其他事項:

When handling the product, touching the encapsulant with bare hands will not only contaminate its surface, but also affect on its optical characteristics. Excessive force to the encapsulant might result in catastrophic failure of the LEDs due to die breakage or wire deformation. For this reason, please do not put excessive stress on LEDs, especially when the LEDs are heated such as during Reflow Soldering.

QEDf 6 0 0U' M p ,J9U JW

μ9Π] ου'