目录

Supply Voltage	VDD	6.0	V

Ope

Recommended usage conditions

Supply Voltage					
input frequency					
Operating temperature					

Application circuit diagram

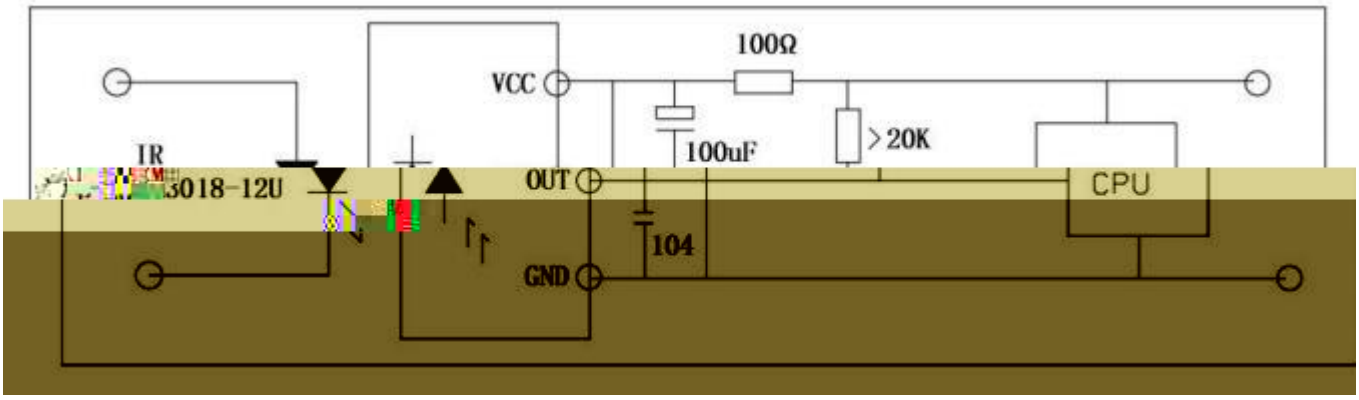

schematic diagram

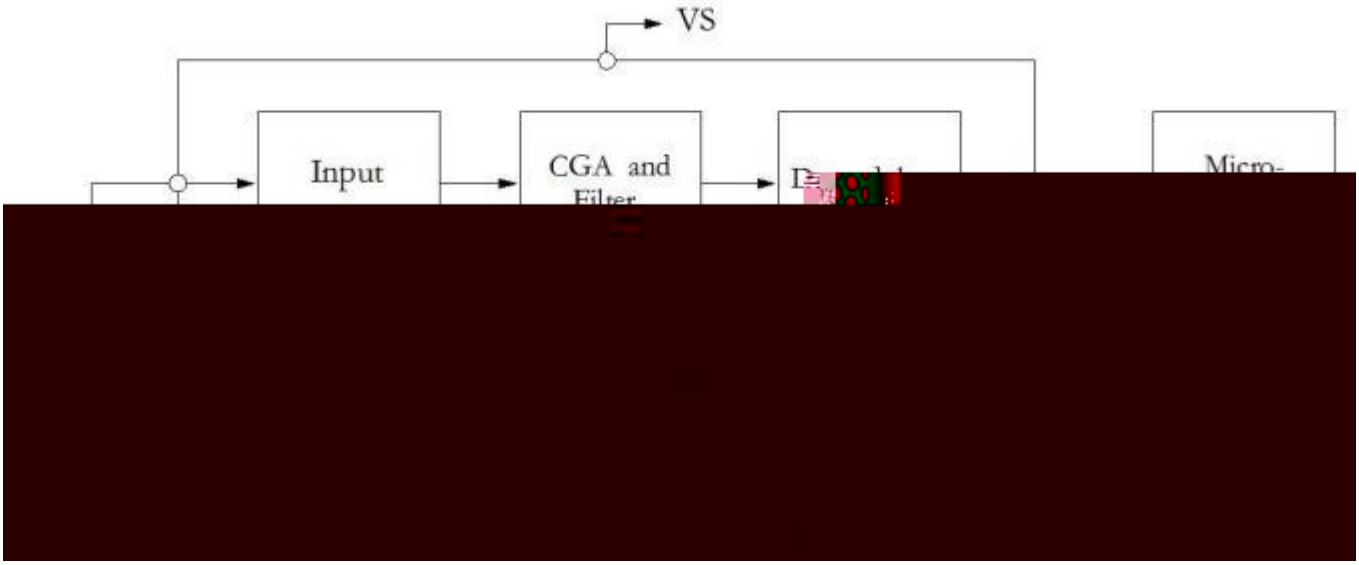

Receiving angle testing method

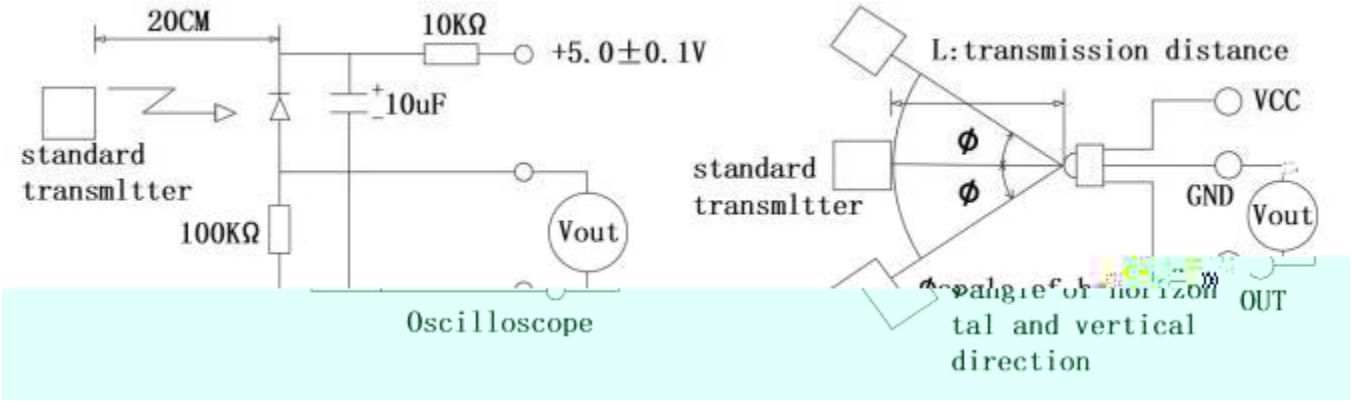

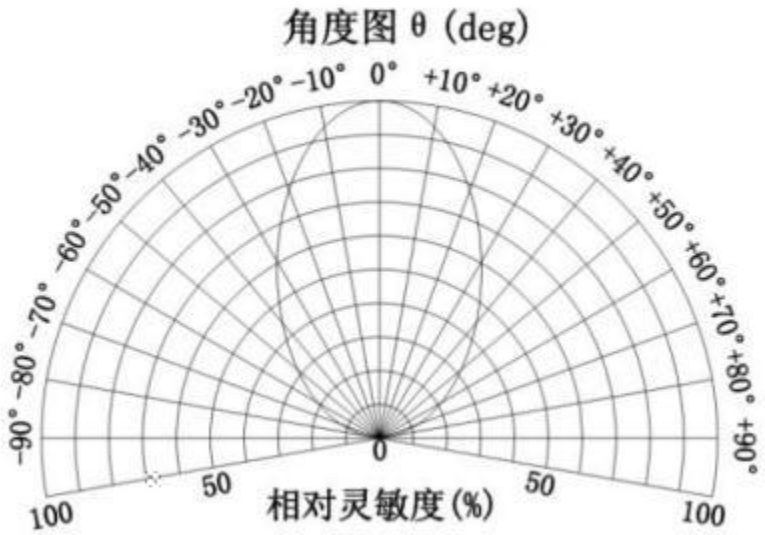

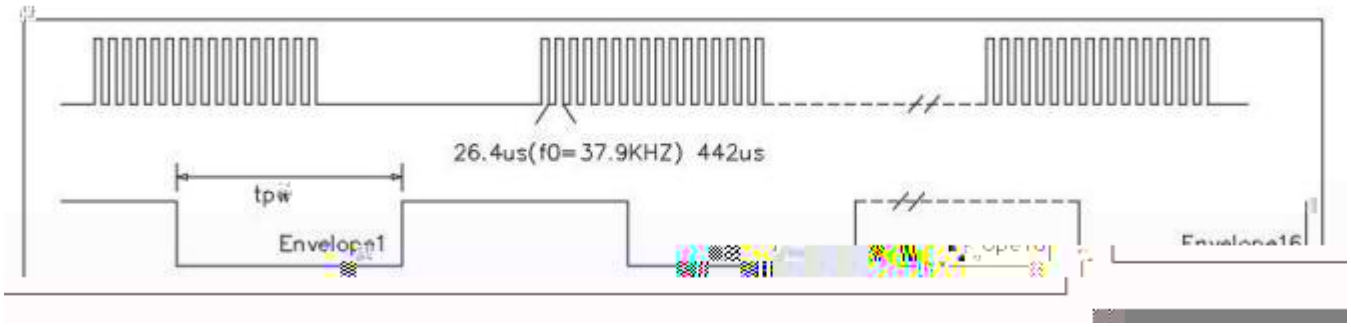

Figure 4. Typical Bandpass Curve

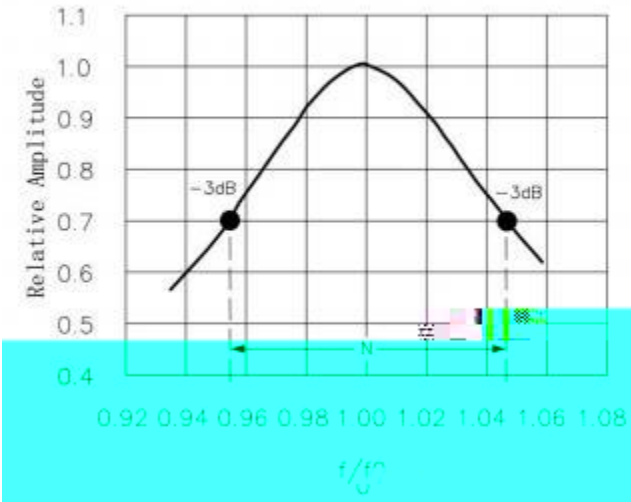

Figure 4. Supply Current VS supply voltage

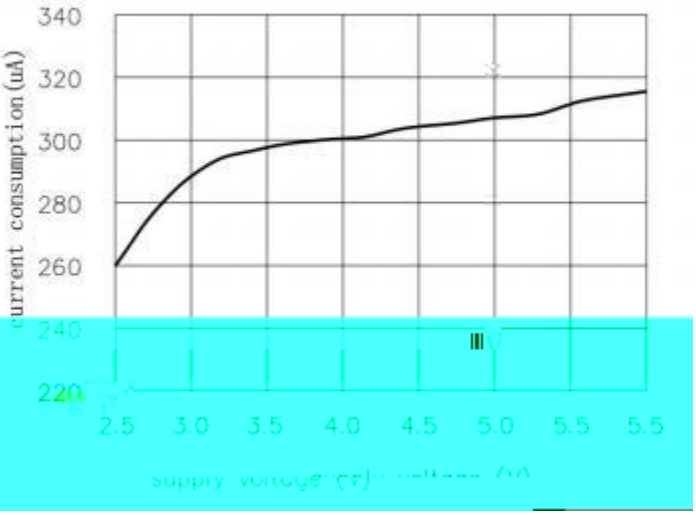

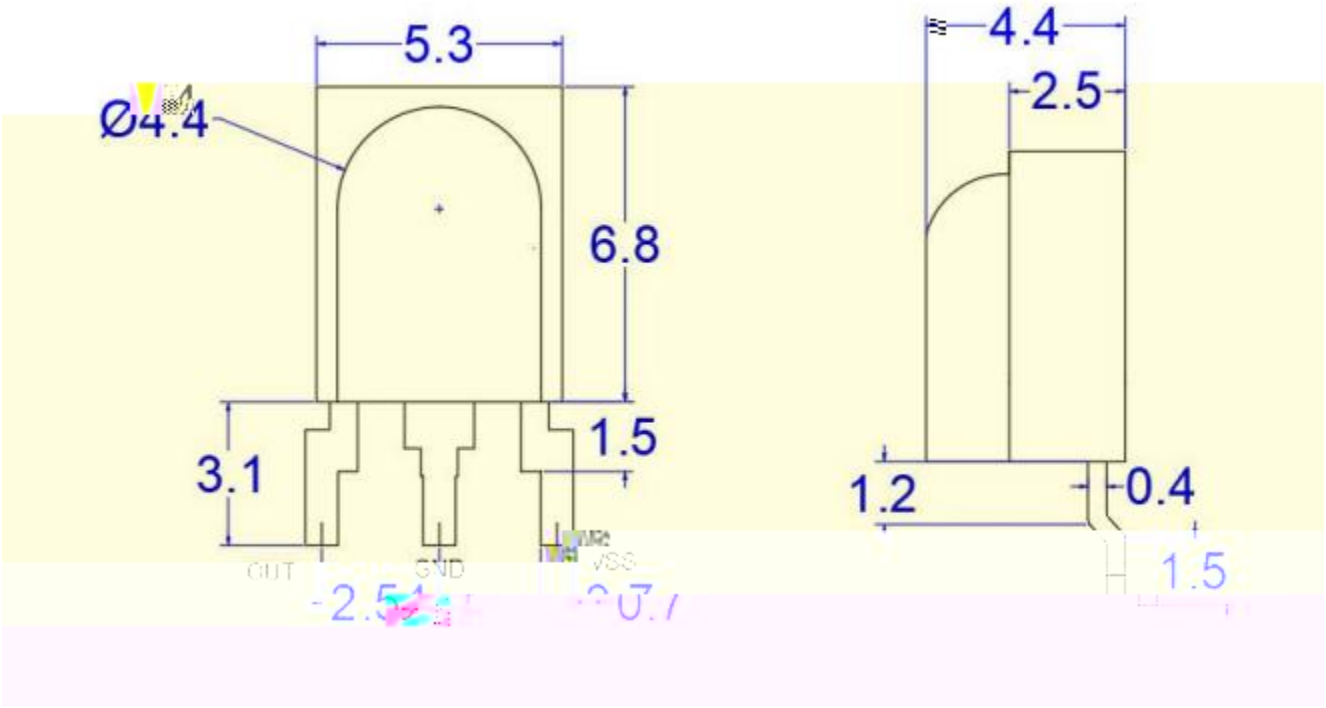

(Note)

Dime

◇ 防潮抗静电包装Moisture Proof and Antti-Electr[illegible]tic Foil Bag

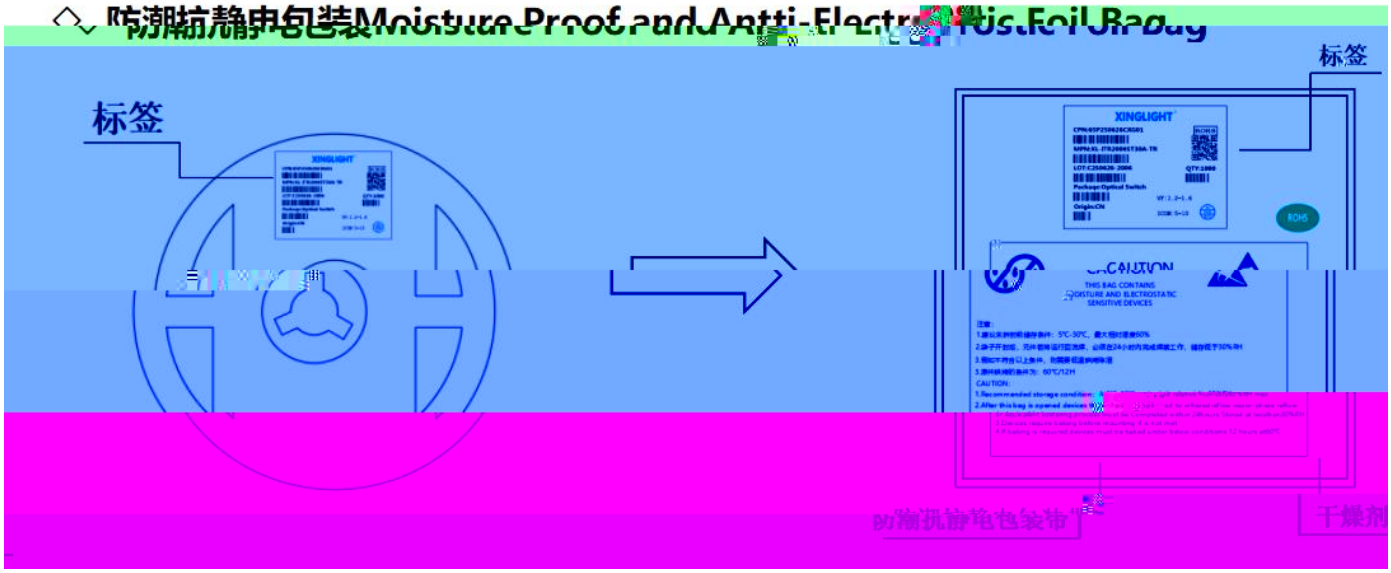

◇ 外包装箱 Cardboard Box

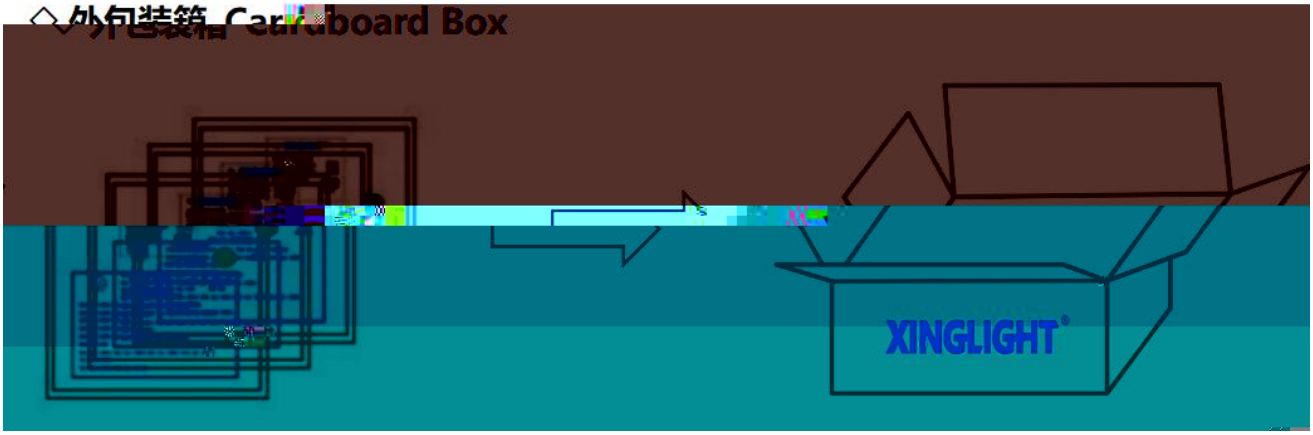

◇ 标签说明 Label Expantion

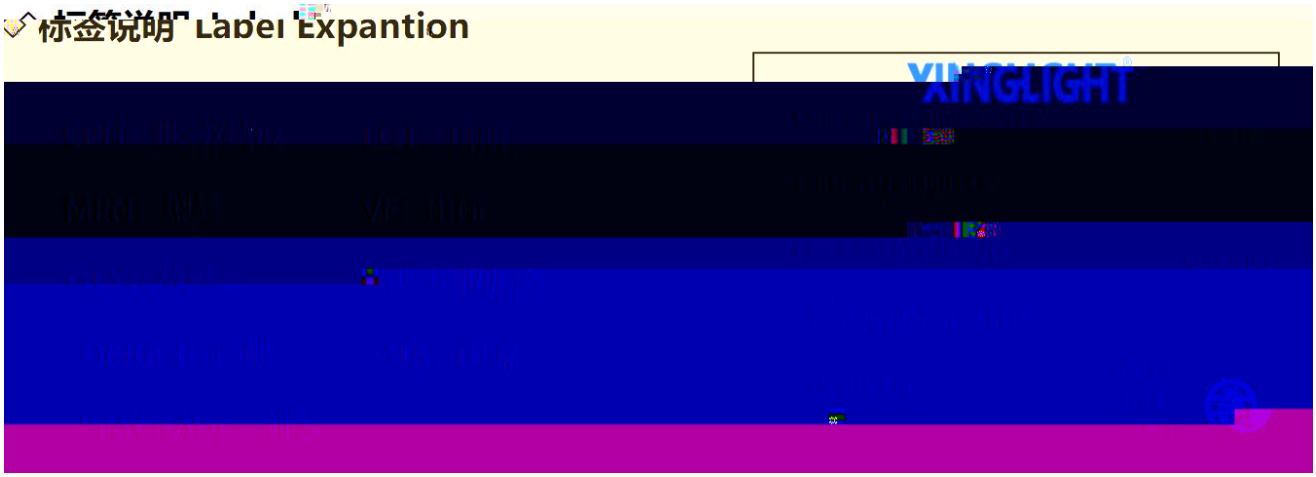

1.

W

300 3

LED

Manual welding is recommended only for repair and heavy industry situations. A soldering iron of less than 30 W is recommended to be used in Hand Soldering. Please keep the temperature of the soldering iron under 300 while soldering. Each terminal ofthe LED is to go for less than 3 second and for one time only.

Be careful because the damage ofthe product is often started at the time ofthe hand soldering.

2. :

Use the conditions shown in the under Figure ofPb-Free Reflow Soldering.

3. :

30 3 50 30

LED

(1

Precautions (2)

: