



.....

.....

.

.....

目録



Supply Voltage VDD 6.0 V


Ope




Recommended usage conditions

Supply Voltage					
input frequency					
Operating temperature					



Application circuit diagram

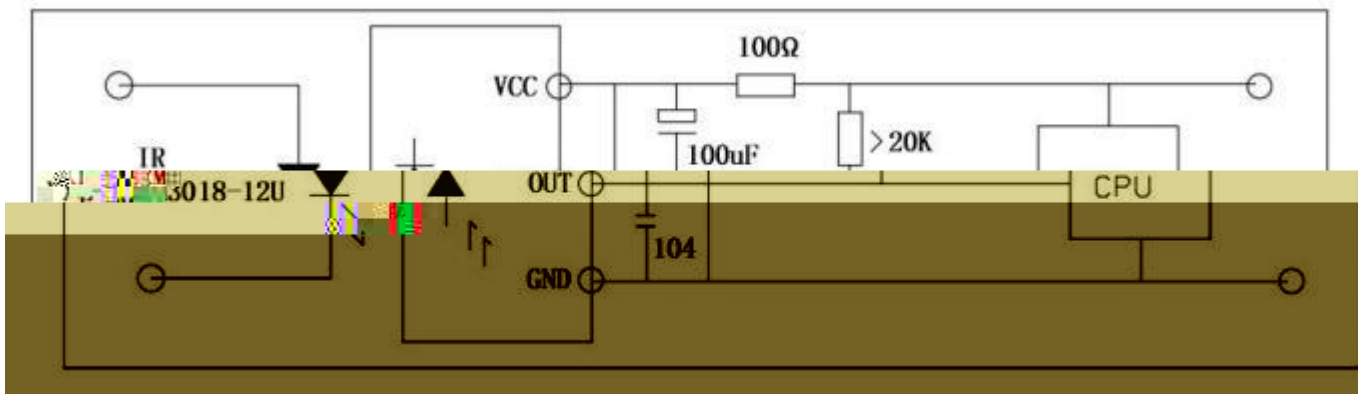

schematic diagram

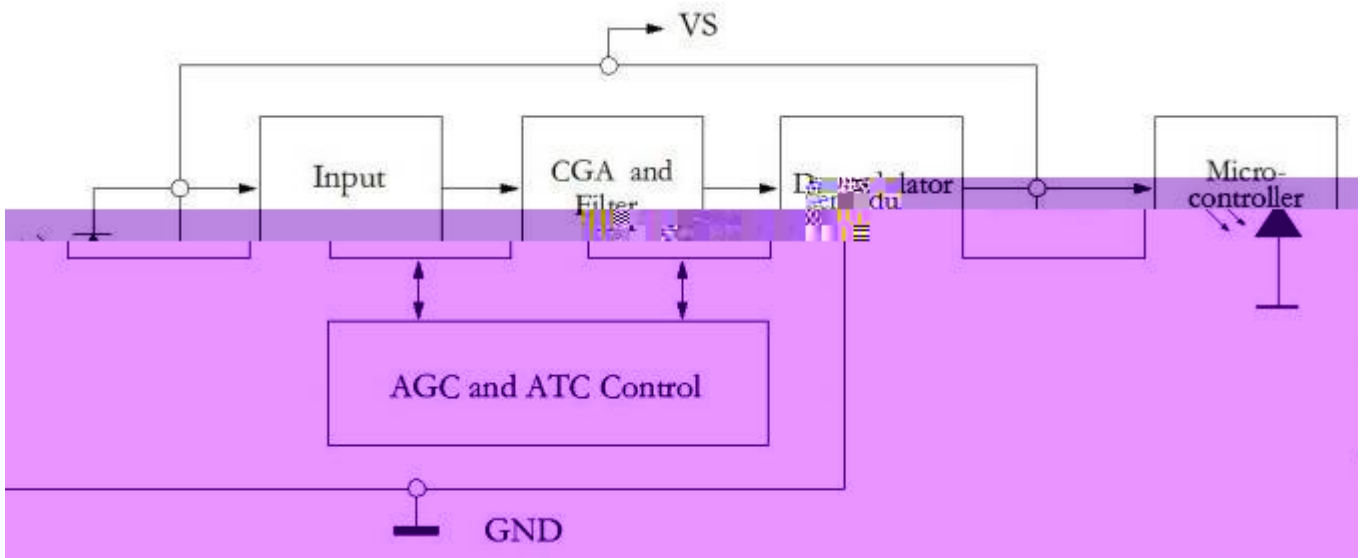

Receiving angle testing method

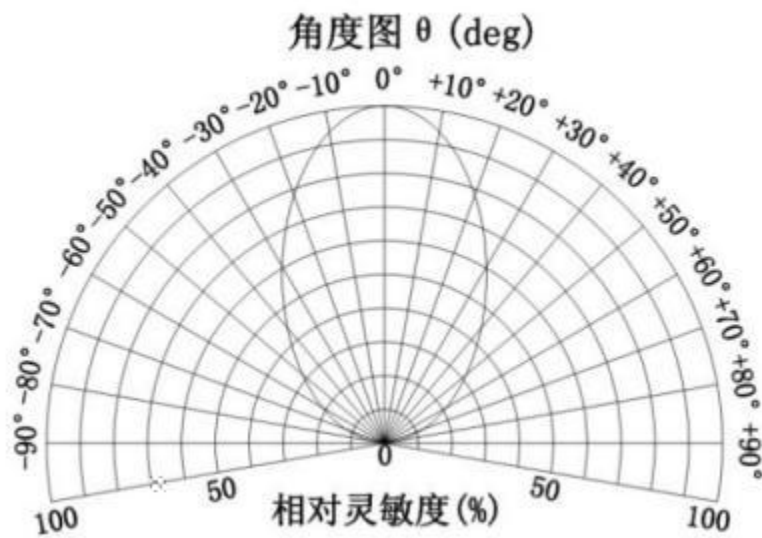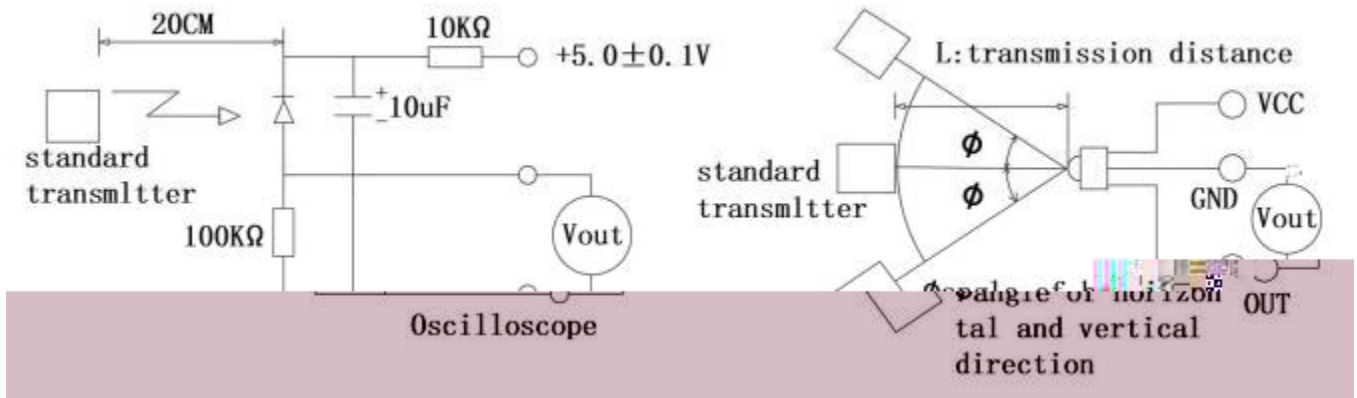

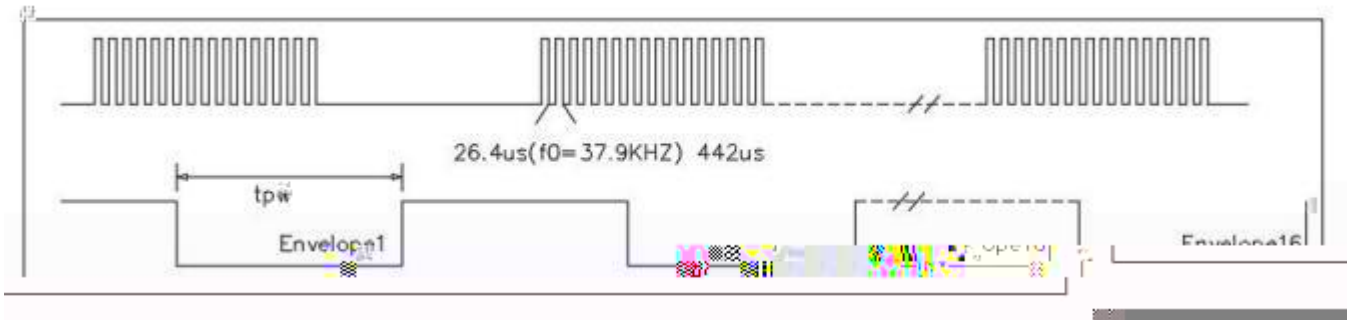


Figure 4. Typical Bandpass Curve


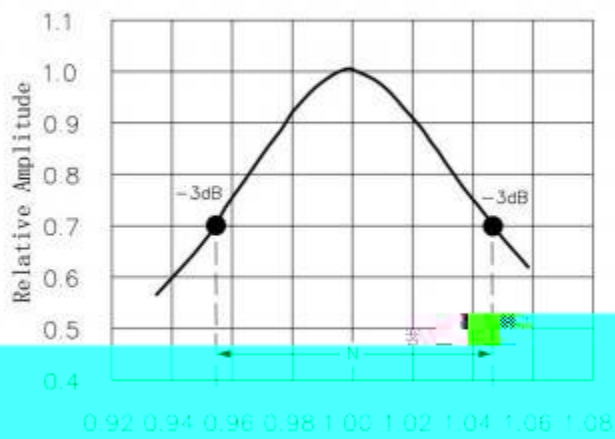


Figure 4. Supply Current VS supply voltage

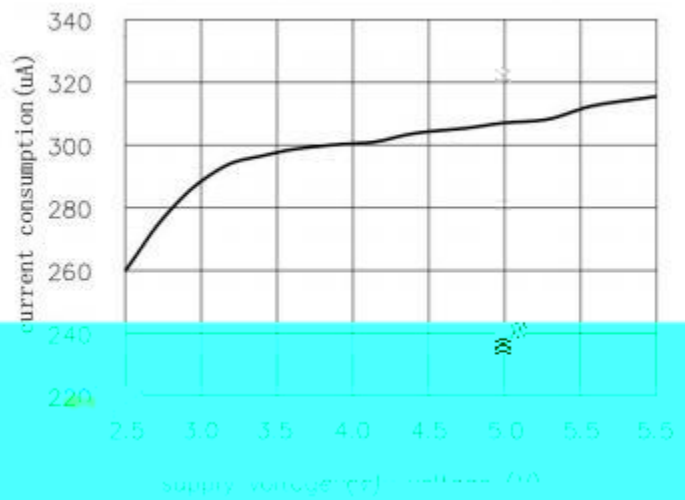


可靠性

信

Items And Conditions

--	--	--	--

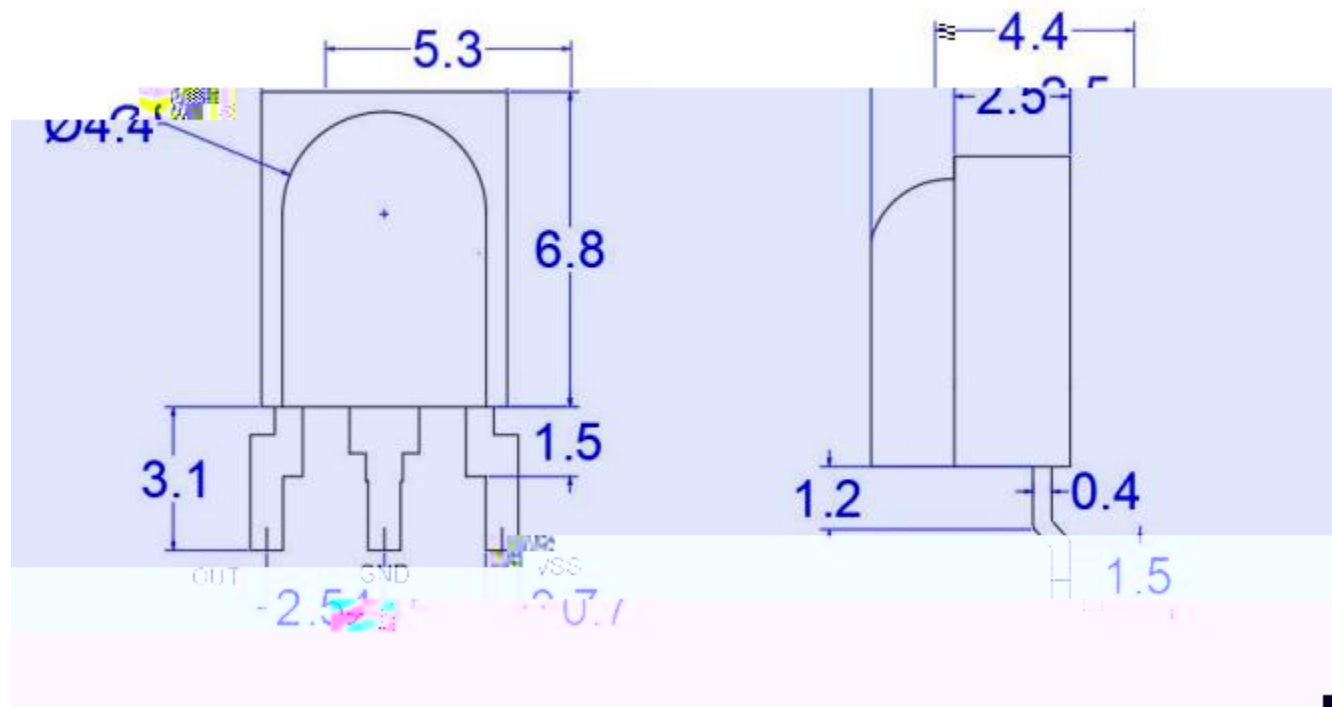

(Note)

Dime



标签

△ 外包装箱 Cardboard



标签说明 Label Ex



(

1.

W

300

3

LED

Manual welding is recommended only for repair and heavy industry situations. A soldering iron of less than 30 W is recommended to be used in Hand Soldering. Please keep the temperature of the soldering iron under 300 while soldering. Each terminal of the LED is to go for less than 3 second and for one time only.

Be careful because the damage of the product is often started at the time of the hand soldering.

2. :

Use the conditions shown in the under Figure of Pb-Free Reflow Soldering.





(

3. :

30

3

50

30

LED



(1)



Precautions (2)

:

