外形尺寸

Outline Dimension

Remarks:

1. All dimensions are in millimeters.

2. Tolerance is ±0.25mm unless otherwise noted

焊接指导（2）

Guideline for Soldering (2)

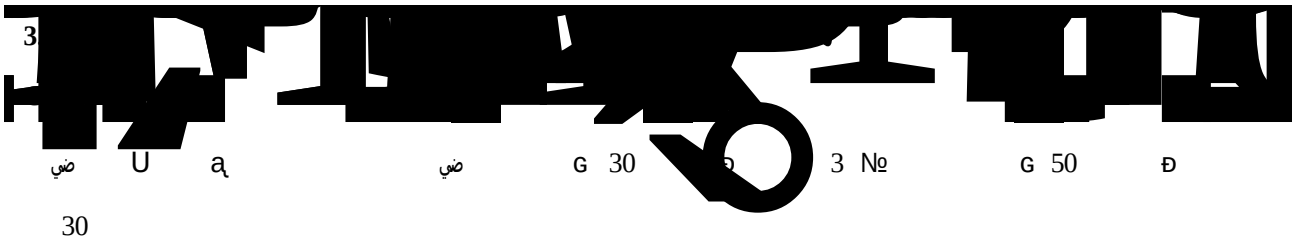

30

It is recommended that alcohol be used as a solvent for cleaning after soldering. Cleaning is to go under 30 for 3 minutes or 50 for 30 seconds. When using other solvents, it should be confirmed beforehand whether the solvents will dissolve the package and the resin or not.

Ultrasonic cleaning is also an effective way for cleaning. But the influence of Ultrasonic cleaning on LED depends on factors such as ultrasonic power. Generally, the ultrasonic power should not be higher than 300W. Before cleaning, a pretest should be done to confirm whether any dam]]]]]] _